



powered by



# **Temperature Monitor Untethered (set of four sensors)**

TMU04 – Tire Monitor Untethered  
BMU04 – Brake Monitor Untethered

## **Install Guide**

(04.10.2024)

- v1.0 – Initial version
- v1.1 – Add new connector information
- v1.2 – V2 Dimensions Added
- v1.3 – first CANchecked release



## Temperature Monitor Untethered - Manual

# Table of Contents

## Temperature Monitor Untethered

1. Introduction	3
2. Specifications	3
3. Quick Install	4
a. Initial Setup	4
b. Receiver - Installation	4
c. Config	5
d. Power-up	5
4. Physical Installation	5
5. Operation & Charging	9
6. Factory Reset	9
7. Configuration	10
8. Troubleshooting / FAQ	12
9. Support	13
A. Default CAN Specifications	14
B. System Configuration	14
C. System Information	16
D. Data Reporting	17



## Temperature Monitor Untethered - Manual

### 1. Introduction

Thank you for purchasing the Temperature Monitor Untethered. The following guide is aimed at providing an overview of the typical install process and configuration steps.

### 2. Specifications

<b>SENSOR</b>	Number of Channels	8/4 (8 default)
	Sample Rate	1-50Hz (10Hz default)
	Field of view	110°
	Battery	250 mAh (built-in charger)
	Autonomy	15 hrs (track use)
	Dimensions	64 x 42 x 17.5 mm
	Accuracy	1°C
	Emissivity	0.01 – 1 (0.83 default)
	IP Rating	IP65
<b>RECEIVER</b>	Supply Voltage	5 – 20V
	Supply Current	50 mA
	Connector	DTM04-4P
	Mating Connector	DTM06-4S
	CAN	2.0A (11bit identifier)
	Bit Rate	500kbps/1Mbps (500kbps default)

### 3. Quick Install

#### a. Initial Setup


First step after receiving the product is putting the sensors on charge using the supplied cables and any USB adapter (including external batteries).

#### b. Receiver – Installation

The receiver comes with a DTM04-4P Connector. Its mating connector part number is DTM06-4S.


Pinout is:

1. GND (Black)
2. 12V (Red)
3. CAN Low (Yellow)
4. CAN High (White)

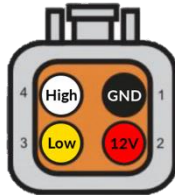

#### CAN Connectivity

Every CAN bus network requires two 120 Ohm resistors placed at each end, as the diagram below ( $R_{term} = 120 \text{ Ohms}$ ) shows. If you are not familiar with CAN bus, we recommend that you consult with a professional. Incorrect installation can damage the devices or produce unsatisfactory performance.

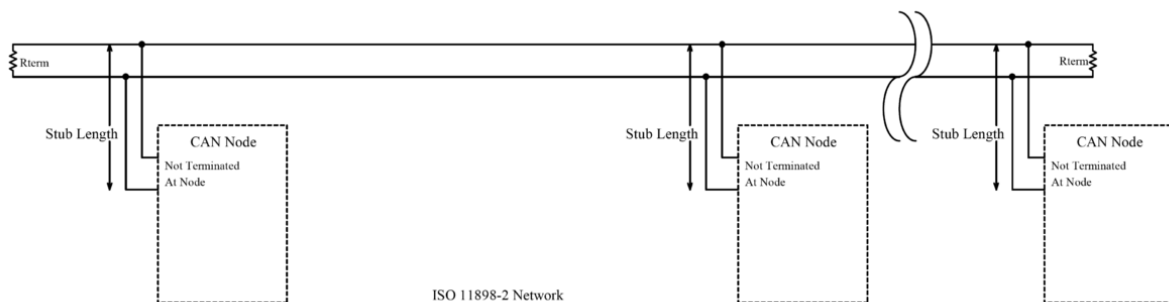

Always use twisted paired cable for CAN Low and CAN High wiring as it greatly improves the signal's tolerance to electrical noise. Also try and keep wiring stubs (cables going from the main CAN bus lines to individual devices) at a minimum.



## Temperature Monitor Untethered - Manual

### **c. Config**

For the full configuration please see chapter 7 “Configuration”.

### **d. Power-up**

The system can now be powered up. After doing so, the STATUS LED on the receiver should turn blue and, after the configuration period passes, green. This signals that the device is transmitting data over CAN.

With the receiver powered and transmitting data over CAN, the next step is turning on the sensors which should've been fully charged by now. One at a time, please remove the magnetic override. After removing the magnetic override, within 60 seconds, the corresponding LED on the receiver should turn green, signaling that the sensor has linked with the receiver. Please repeat this step for all the sensors in your kit.

After ~1 minute, each sensor will start transmitting data and the corresponding LED on the receiver should blink green.

## 4. Physical Installation

Before installing the sensor in its final position, please ensure that the sensor is correctly linked with the receiver!

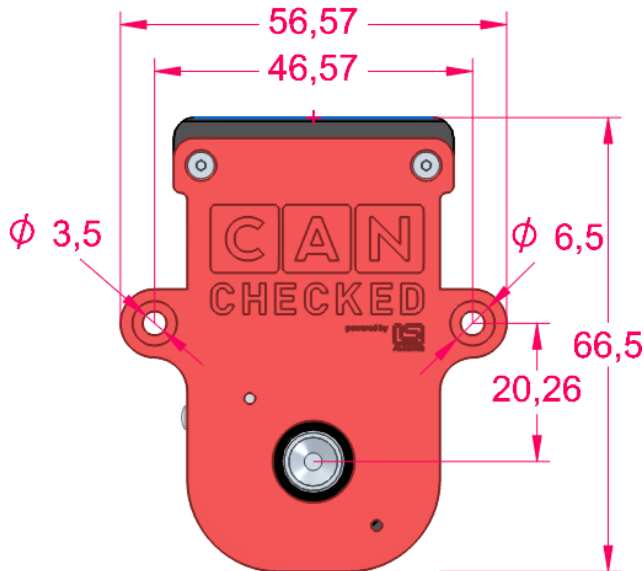


Figure 1 - Mounting sensor  
(All dimensions in mm)



Figure 2 - Mounting receiver  
(All dimensions in mm)

The sensor should be mounted in its final position using the mounting holes situated on the sides of the housing. For temporary installs we've successfully used 3M Dual-Lock tape, but extra care should be employed when using such a solution.

We do recommend placing the sensors away from direct exposure to significant heat sources (i.e. exhausts).

The IR sensor has a horizontal field of view of 110°. As the sensor is placed further away, the maximum width of the brake increases. Please consult the table and the graph below or get in touch if you have any questions. Please consult 'Figure 1' to determine how to orient the sensor.

After installing the sensor in its final position, please check that the corresponding LED on the receiver continues blinking green. If the LED turns red it means that the sensor went outside of range and a range extender option should be used. Please get in touch with us for more details.

**For best wireless range please ensure that the receiver and sensors are all oriented vertically.**

Maximum Brake Width (mm)	Mounting Distance (mm)
100	35
150	52
225	79
250	88
275	96
300	105
350	123
400	140

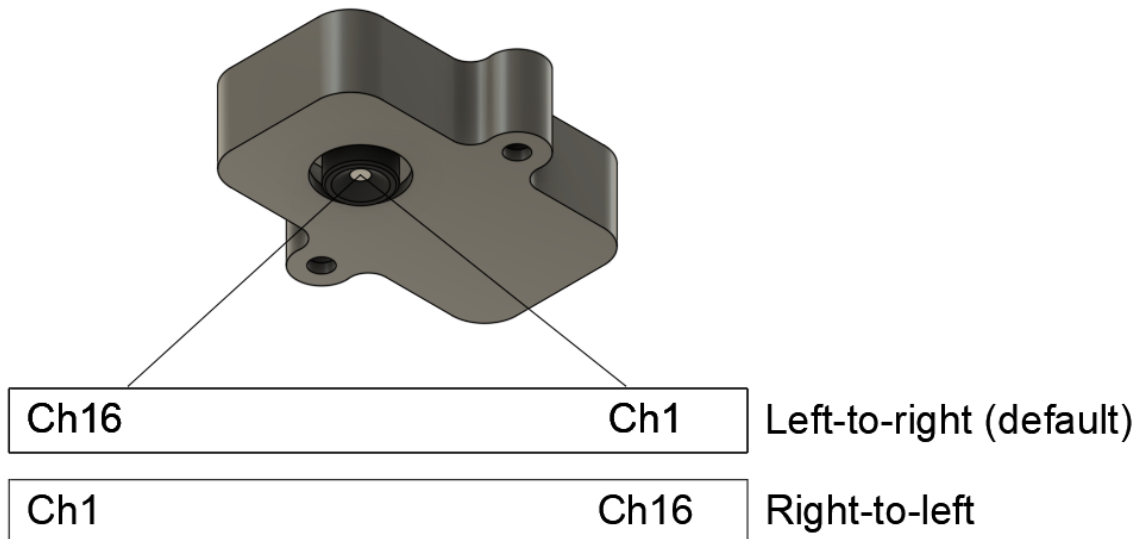


Figure 2 – Channel assignment / sensor data order

Temperature Monitor Untethered - Manual

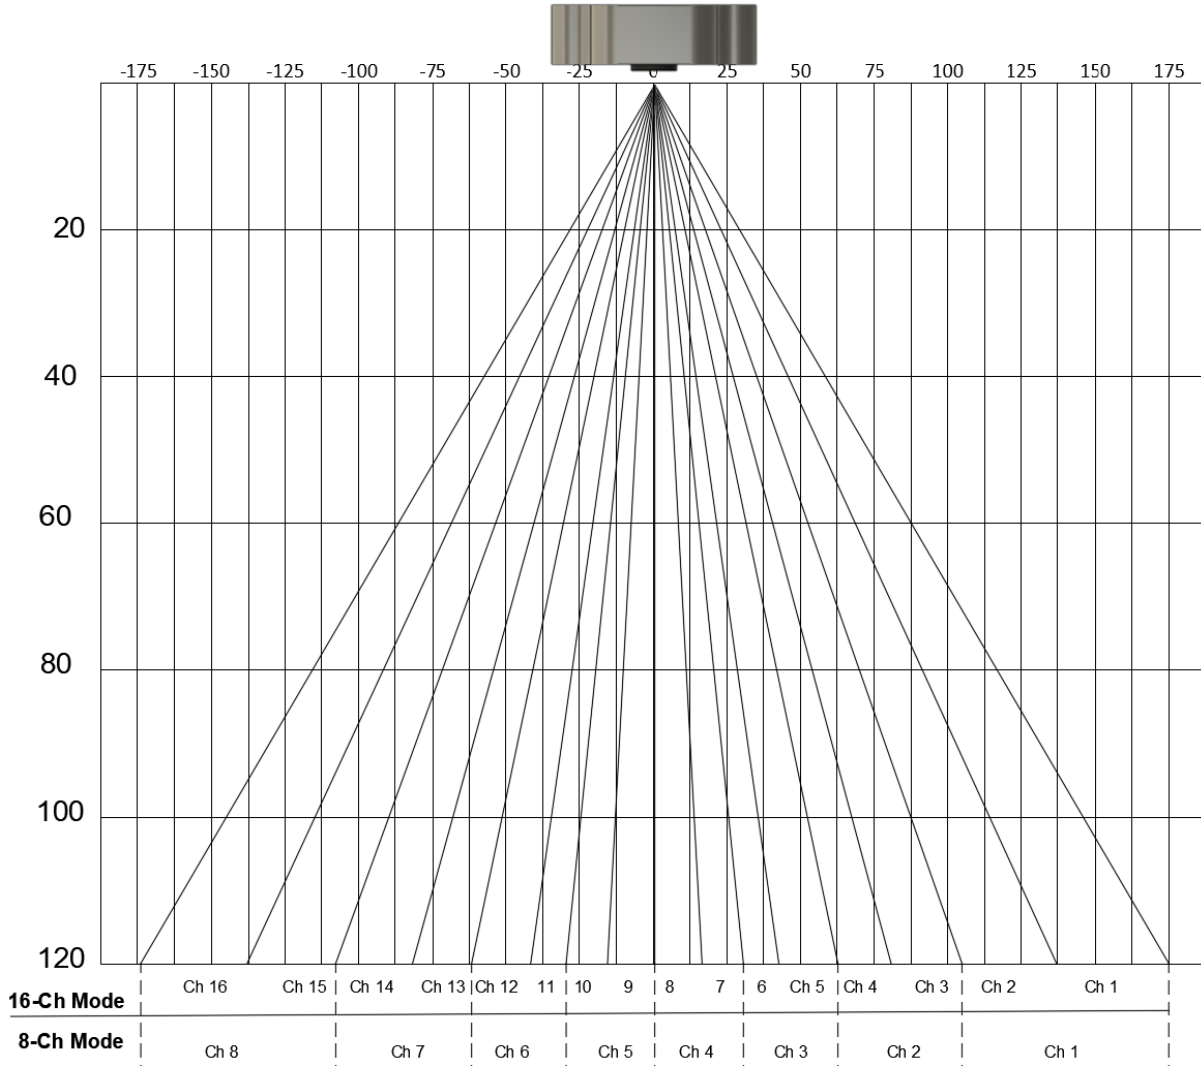


Figure 3 - Visual Representation of channel assignments (measures in millimeters)



## 5. Operation & Charging

Each sensor has a 250mAh battery that can be charged using the built-in USB-C connector. When in use, it allows for up to 15 hours of track time.

**Low battery indication** – the sensor will notify the user that it's approaching the end of its battery life (3% state-of-charge) by flashing the receiver's LED yellow, instead of green, as usual. Charging is done using the cables supplied from any USB port. External batteries can be used as well. A full charge takes around 90 minutes.

There's also a battery indication when powering up the sensor (after removing the magnetic overrides).

- **Quick Flash** – low battery
- **Slow flashes** – each flash will signify 10% of battery life (i.e. 5x flashes will mean the sensor has 50% battery life remaining)

**Preserving battery life when not in use** – while active, the sensors continuously send data to the receiver, draining the battery. When not in use, they can be deactivated by placing a magnet in a similar position to the ones in the charging dock. Alternatively, the sensors can be placed in their carrying case which has the magnets pre-fitted. Please confirm that they have been deactivated by checking the corresponding LED on the receiver to turn red.

**Demo units need to be placed in the charging dock or magnetically deactivated while charging!**

## 6. Factory Reset

In some scenarios you might need to reset the network and configuration parameters of the receiver or the sensors. The following scenarios are instances when a factory reset is required:

- **Changing the order of the sensors connected to a receiver**
- **Connecting a new sensor to an existing network**

### Factory resetting the receiver

- Expose the PCB by removing the two mounting screws in the case
- Ensure it is powered (STATUS LED is blue or green)
- Press & hold the control button (S1) for around 10s.
- Ensure it is powered and has enough battery life. Please make sure no magnetic override is present.
- Press & hold the control button until the status LED briefly turns on.



## 7. Configuration

The default settings are as follows, along with a short description of what their function is:

Parameter	Default Value	Function
<b>CAN Base ID</b>	Tire: 0x310 - Front Left 0x330 - Front Right 0x350 - Rear Left 0x370 - Rear Right  Brake: 0x210 - Front Left 0x230 - Front Right 0x250 - Rear Left 0x270 - Rear Right	Base CAN ID for all messages sent from the sensor
<b>Emissivity</b>	Tire: 0.75          Brake: 0.83	Lowering the emissivity increases the temperature.  Suggested tire values depending on mounting distance: <ul style="list-style-type: none"> <li>• 50mm - 0.86</li> <li>• 150mm - 0.8</li> <li>• 200 - 0.77</li> </ul> Suggested brake values depending on material of the disk: <ul style="list-style-type: none"> <li>• 0.83 - for ceramic disks</li> <li>• 0.55 - for normal steel disks</li> </ul> Accepted values (1 is 0.01): 1-100



## Temperature Monitor Untethered - Manual

<b>Sample Rate</b>	50 Hz	Sampling and reporting rate for the sensor
<b>Number of Channels</b>	8	Number of channels used for sampling
<b>Sensor Data Order</b>	Left to Right <i>(Figure 2)</i>	Channel numbering direction when looking at the sensor's camera
<b>CAN Bit Rate</b>	500 kbps	
<b>Initial Configuration Delay</b>	60 seconds	The delay, in seconds, between the sensor powering up and it starting to send temperature data over CAN. This is when new configuration parameters can be sent.



## Temperature Monitor Untethered - Manual

Please consult Appendix A: Temperature Monitoring Untethered CAN Protocol for complete information on the CAN protocol.

### **Typical Configuration Procedure:**

1. The parameters for the whole system are configured by sending configuration messages to the receiver. The sensors retrieve those parameters on power-up.
2. Ensure the receiver is powered and with correct CAN connectivity to the device you're using to transmit CAN messages from.
3. If you are using a device with CAN sniffing capabilities, please confirm that, after powering the sensor, you're seeing the SYS\_INFO\_1 CAN (Base CAN ID + 0x08) message come in every 5 seconds during the initial configuration delay.
4. Form the configuration messages (CFG\_REQ\_1/2) in your CAN transmit tool and, if valid, you will receive back a response (CFG\_RSP\_1)/2 to confirm the new settings.
5. Power cycle the receiver and reset (not factory reset) each sensor to make sure it received its updated configuration. Resetting the sensor means simply putting the magnetic override next to it, keeping it for 1-2 seconds, then removing it.



## 8. Troubleshooting / FAQ

### Situation 1: Sensor's LED lighting up red

- a. Make sure the sensor has been fully charged.
- b. Bring the sensor near the receiver. Try resetting it using the magnetic override.
- c. Try bringing it back to factory settings using the steps described in section **Factory Reset**
- d. If this happens during use, try

### Situation 2: Not getting any data in my CAN dash/logger

- a. Use a multimeter to check that the sensor is getting 12V on its power supply pins.
- b. Double check wiring and make sure your CAN stubs' length is not more than 150cm. Ensure the correct 120 Ohm termination resistors are installed. If possible, simplify the connectivity by wiring the sensor directly to a CAN sniffer.
- c. If your CAN logger/dash allows you to, check that CAN receive count is increasing.
- d. Double-check the configuration parameters on your CAN dash/logger.
  - Baud rate
  - CAN Ids
  - Formulas and byte order

### Situation 3: Can you suggest an USB-CAN configuration tool?

- a. CAN BUS Analyzer Tool (Microchip, APGDT002)
- b. PCAN-USB (requires DB9 wiring adaptor)

## 9. Support

Please make sure to check the downloads section of our support page as it provides the product's datasheet and configuration files for the most common CAN dashboards/loggers.

### Downloads:

<http://www.canchecked.de/tmu04>



## Appendix A: Temperature Monitor Untethered

### CAN Communication Protocol V1.0

Updated 04.10.2024

#### A. Default CAN Specifications

1.

Base ID Tire

- FL - 0x310
- FR - 0x330
- RL - 0x350
- RR - 0x370

Base ID Brake

- FL - 0x210
- FR - 0x230
- RL - 0x250
- RR - 0x270

2. Baud Rate: 500kbps

#### B. System Configuration

**Name:** CFG\_REQ\_1

**Direction:** To Device

**CAN Id:** <Base Id>

Byte	Name	Formula	Description
0	New Base Id MSB		New Base ID for CAN messages. Requires a power cycle. I.e. 0x310 would be: Byte 0 - 0x03 Byte 1 - 0x10
1	New Base Id LSB		
2	Emissivity	= Value / 100	I.e. setting to 75 is 0.75
3	Sample Rate	= Value	1 - 50 Hz (Values outside this range are replaced with the closest valid one)
4	Sensor 1 Data Order	= Value	0 - temperatures are output right to left 1 - temperatures are output left to right



Temperature Monitor Untethered - Manual

5	Sensor 2 Data Order	= Value	
6	Sensor 3 Data Order	= Value	
7	Sensor 4 Data Order	= Value	

**Name:** CFG\_RFP\_1

**Direction:** From Device

**CAN Id:** <Old Base Id> + 0x01

Byte	Name	Formula	Description
0	New Base Id MSB		New Base ID for CAN messages. Requires a power cycle. I.e. 0x310 would be: Byte 0 - 0x03 Byte 1 - 0x10 <b>0xFF &amp; 0xFF for default address (0x210)</b>
1	New Base Id LSB		
2	Emissivity	= Value / 100	I.e. setting to 75 is 0.75
3	Sample Rate	= Value	1 - 50 Hz (Values outside this range are replaced with the closest valid one)
4	Sensor 1 Data Order	= Value	0 - temperatures are output right to left 1 - temperatures are output left to right
5	Sensor 2 Data Order	= Value	
6	Sensor 3 Data Order	= Value	



Temperature Monitor Untethered - Manual

7	Sensor 4 Data Order	= Value	
---	---------------------	---------	--



Temperature Monitor Untethered - Manual

**Name:** CFG\_REQ\_2

**Direction:** To Device

**CAN Id:** < Base Id> + 0x02

Byte	Name	Formula	Description
0	Initial Configuration Duration (seconds)	= Value	Duration for the "Initial Configuration" phase. In seconds. Minimum value is 10s.
1	CAN Baud Rate	= 0 - 500kbps 1 - 1Mbps	Any value different than '0' or '1' will make the system default to 500kbps.
2			
3			
4			
5			
6			
7			

**Name:** CFG\_RSP\_2

**Direction:** From Device

**CAN Id:** < Old Base Id> + 0x03

Byte	Name	Formula	Description
0	Initial Configuration Duration (seconds)	= Value	
1	CAN Baud Rate	= 0 - 500kbps 1 - 1Mbps	Any value different than '0' or '1' will make the system default to 500kbps.



Temperature Monitor Untethered - Manual

2			
3			
4			
5			
6			
7			

The device echoes back the settings sent in the first message. <Base Id> is still the one previous to the change. New settings are applied after power cycle of both the ITM Receiver and of the individual sensors (by using the magnetic pad)

### C. System Information

**SYS\_INFO\_1** is sent until the "Initial Configuration" period expires.

**Name:** SY\_INFO\_1

**Direction:** From Device

**CAN Id:** <Base Id> + 0x10

**Time Interval:** Every 5s

Byte	Name	Formula	Description
0	Receiver FW Major		
1	Receiver FW Major		
2	Emissivity	= Value / 100	I.e. setting to 75 is 0.75
3	Sample Rate	= Value	1 - 50 Hz (Values outside this range are replaced with the closest valid one)
4	Initial Configuration Duration (seconds)	= Value	Number of seconds to allow at startup for configuration.



## Temperature Monitor Untethered - Manual

5	Channel	= Value	Wireless channel number
6	Reserved		
7	Reserved		

### D. Data Reporting

**Name:** DATA\_SENS\_INFO

**Direction:** From Device

**Description:** Sent once for each sensor, after it joins, before it begins reporting.

**CAN Id:** <Base Id> + 0x50

**Time Interval:** Once

Byte	Name	Formula	Description
0	Sens 1 FW Major		
1	Sens 1 FW Major		
2	Sens 2 FW Major		
3	Sens 2 FW Major		
4	Sens 3 FW Major		
5	Sens 3 FW Major		
6	Sens 4 FW Major		
7	Sens 4 FW Major		

**After the <Initial Configuration Delay> expires, the following messages will be sent over CAN.**



## Temperature Monitor Untethered - Manual

- 4 x DATA\_TEMPS\_1** (first four temperature channels for each sensor)
- 4 x DATA\_TEMPS\_2** (last four temperature channels for each sensor)
- 1 x SENS\_SUMMARY\_1/2** (information about battery state and signal strength)



Temperature Monitor Untethered - Manual

**Name:** DATA\_TEMPS\_1

**Direction:** From Device

**CAN Id:** <Base Id> + 0x20 + Sensor Index (1...4) - 1 > \* 2

**Time Interval:** Depending on <Sample Rate>

Byte	Name	Formula	Description
0	Chan 0 MSB	= (Value + 200) * 10	The temperature reading is offset by 200* C and then multiplied by 10. This gives a usable reporting range of: -200 *C -> 6300* C with 0.1 *C per bit.  I.e. 88.9*C => 2889 MSB: 0x0B LSB: 0x49
1	Chan 0 LSB		
2	Chan 1 MSB		
3	Chan 1 LSB		
4	Chan 2 MSB		
5	Chan 2 LSB		
6	Chan 3 MSB		
7	Chan 3 LSB		

**Name:** DATA\_TEMPS\_2

**Direction:** From Device

**CAN Id:** <Base Id> + 0x20 + Sensor Index (1...4) - 1 > \* 2

**Time Interval:** Depending on <Sample Rate>

Byte	Name	Formula	Description
0	Chan 4 MSB	= (Value + 200) * 10	The temperature reading is offset by 200* C and then multiplied by 10. This gives a usable reporting range of: -200 *C -> 6300* C with 0.1 *C per bit.  I.e. 88.9*C => 2889 MSB: 0x0B
1	Chan 4 LSB		
2	Chan 5 MSB		
3	Chan 5 LSB		



Temperature Monitor Untethered - Manual

4	Chan 6 MSB		LSB: 0x49
5	Chan 6 LSB		
6	Chan 7 MSB		
7	Chan 7 LSB		

**Name:** DATA\_SENS\_SUMMARY\_1

**Direction:** From Device

**CAN Id:** <Base Id> + 0x40

**Time Interval:** Depending on <Sample Rate>

Byte	Name	Formula	Description
0	Sens 1 SoC	= Value	0 - 100% reading for each sensor's battery level
1	Sens 2 SoC	= Value	
2	Sens 3 SoC	= Value	
3	Sens 4 SoC	= Value	
4	Sens 1 LQ	= Value	Indication for each sensor's wireless signal strength. Please consult the product manual for acceptable figures.
5	Sens 2 LQ	= Value	
6	Sens 3 LQ	= Value	
7	Sens 4 LQ	= Value	



Temperature Monitor Untethered - Manual

**Name:** DATA\_SENS\_SUMMARY\_2

**Direction:** From Device

**CAN Id:** <Base Id> + 0x40

**Time Interval:** Depending on <Sample Rate>

Byte	Name	Formula	Description
0	Sens 1 Transmit Rate	= Value	0 - 100 reading for each sensor's number of messages sent per second
1	Sens 2 Transmit Rate	= Value	
2	Sens 3 Transmit Rate	= Value	
3	Sens 4 Transmit Rate	= Value	
4	Reserved		
5	Reserved		
6	Reserved		
7	Reserved		