



Installation instructions for your MFD28 in the Audi A4 B8

Beforehand

Thank you for your purchase of your CANchecked display for the Audi A4 B8.

During the development of the product, attention was paid to the highest accuracy of fit and quality. The display has been test assembled by several test persons using these installation instructions and continuously improved so that you have no problems with the conversion.

If you have feedback, criticism, or change requests for us, it is best to send us an e-mail to info@canchecked.de.



General information

The display is a very sensitive device. One should act with extreme caution here. Any pressure on the case or the display itself must be avoided.

CANchecked assumes no liability for this conversion or for damage during the conversion or during operation. The instructions were created to the best of our knowledge and belief.

The conversion time is about 1.5 hours for an experienced mechanic.

Required tools

- Small flat flat-head screwdriver
- Assembly tool (sold separately)
- 10 mm drill and file

1) Preparing the interior



To remove the air vent, the trim must be removed from the snap-in lugs all around with a mounting wedge. When removing the panel, pay attention to the cables of the airbag indicator light and the hazard warning light switch. The connector for both modules must be unlocked before unplugging as shown in the picture.



2) Expand ventilation


You can now carefully pry the air vent at both corners and then pull it towards you.



Now don't forget to loosen the plug of the lighting of the adjustment wheel.




Now you can remove the nozzle completely and start clipping out the frame and the cover of the adjustment wheel all around.

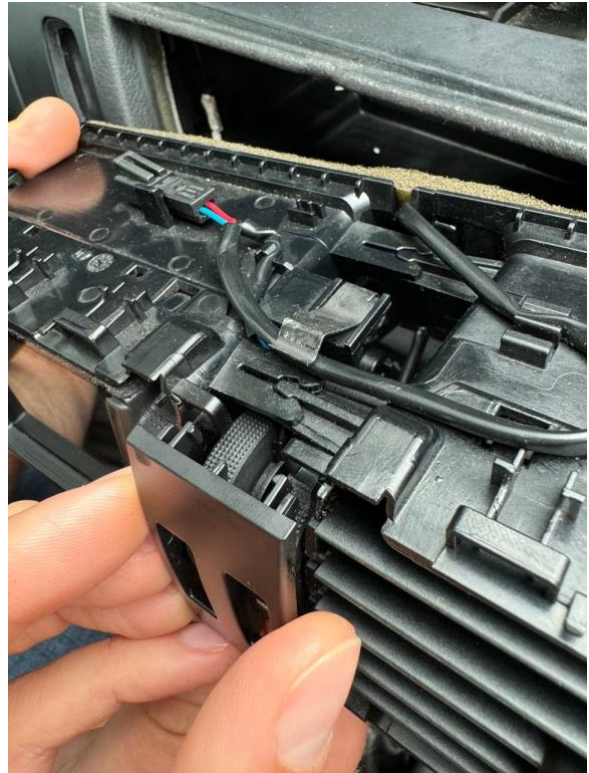

3) Connection OBD connector

The OBD connector of the wiring harness is plugged into the OBD port in the upper driver's footwell and the two Molex cables are then routed through the dashboard towards the air vent together with the Micro USB cable. You can hide the USB cable under the side cover of the center console and you can always get to it quickly. In the air vent you have to drill 2 holes next to each other and then work them out with a file to the slotted hole. The hole does not have to be as big as in the picture, it is enough if you can get the two Molex connectors and the USB cable through it.

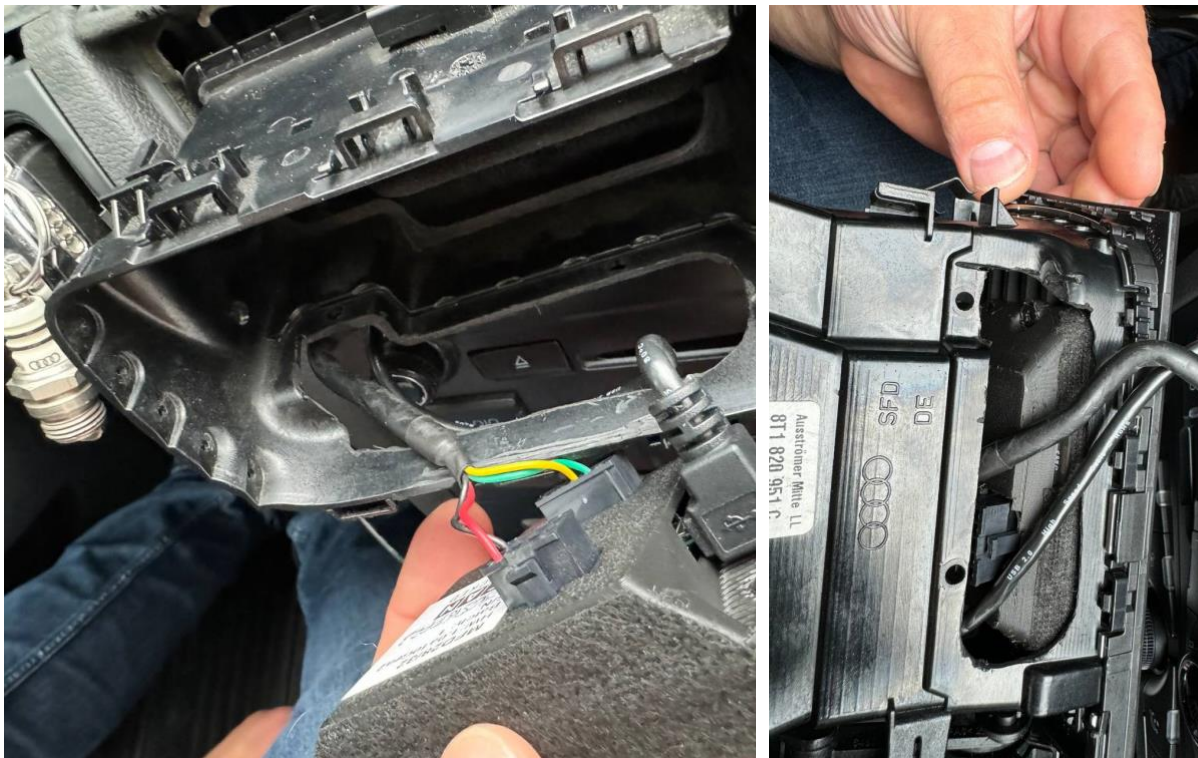

Now all you have to do is connect the USB and the CANchecked wiring harness to your display, clip in the cover and check the display for function. If this is given, you can complete the vehicle and you're done. Please pay attention to the previously unplugged cables when assembling.



We hope you have as much fun with your CANchecked display as we do. If you have any questions, please feel free to contact info@canchecked.de by e-mail .

We also have a support group on Facebook where other customers also help and share their experiences:

<https://www.facebook.com/groups/CANcheckedSupport/>